

..I.. FIXING PIN TYPE

1. Removing links

Using a pin-pusher, push the link fixing pin in the direction of the arrow mark on the link.

NOTE: There are several types of fixing pins, such as an "S" shape pin (Fig. 1), a bobby pin shape (Fig. 2) or a constricted pin (Fig. 3).

If there are no arrow markings on the links, push the pin out from the flat head side of the pin.

2. Reassembly

Reverse the above procedure by inserting the pin in the opposite direction of the arrow.

